



# Types of Brackets

Type A:

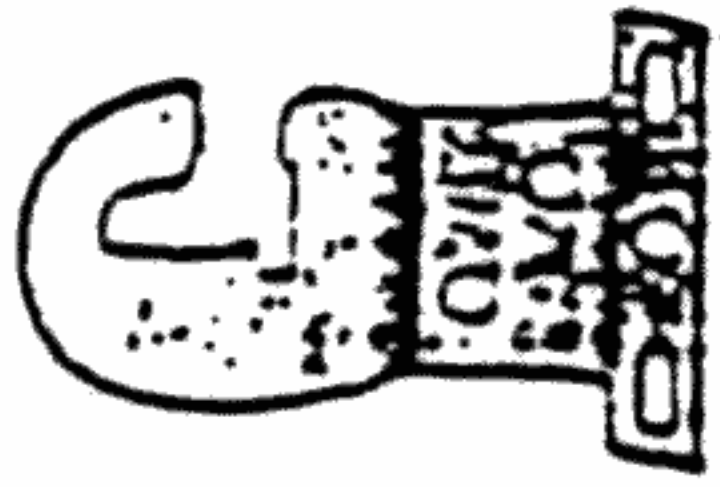


Upper Slotted Bracket

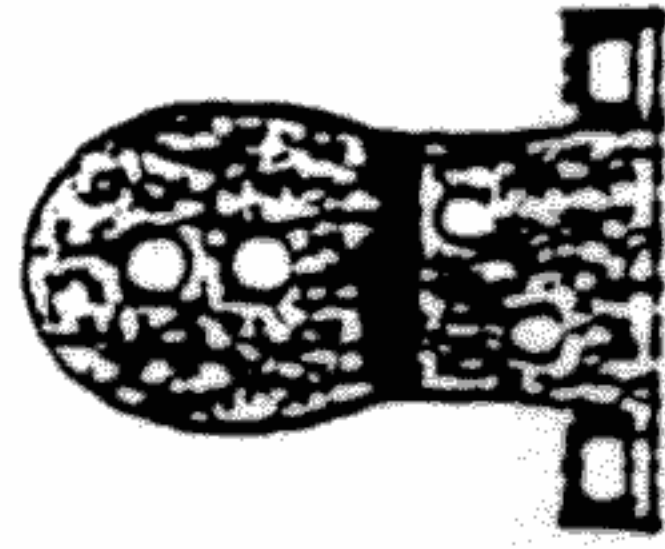

Round Pin Bracket

To be used for outside wall mount and ceiling mount.


## Outside Mount

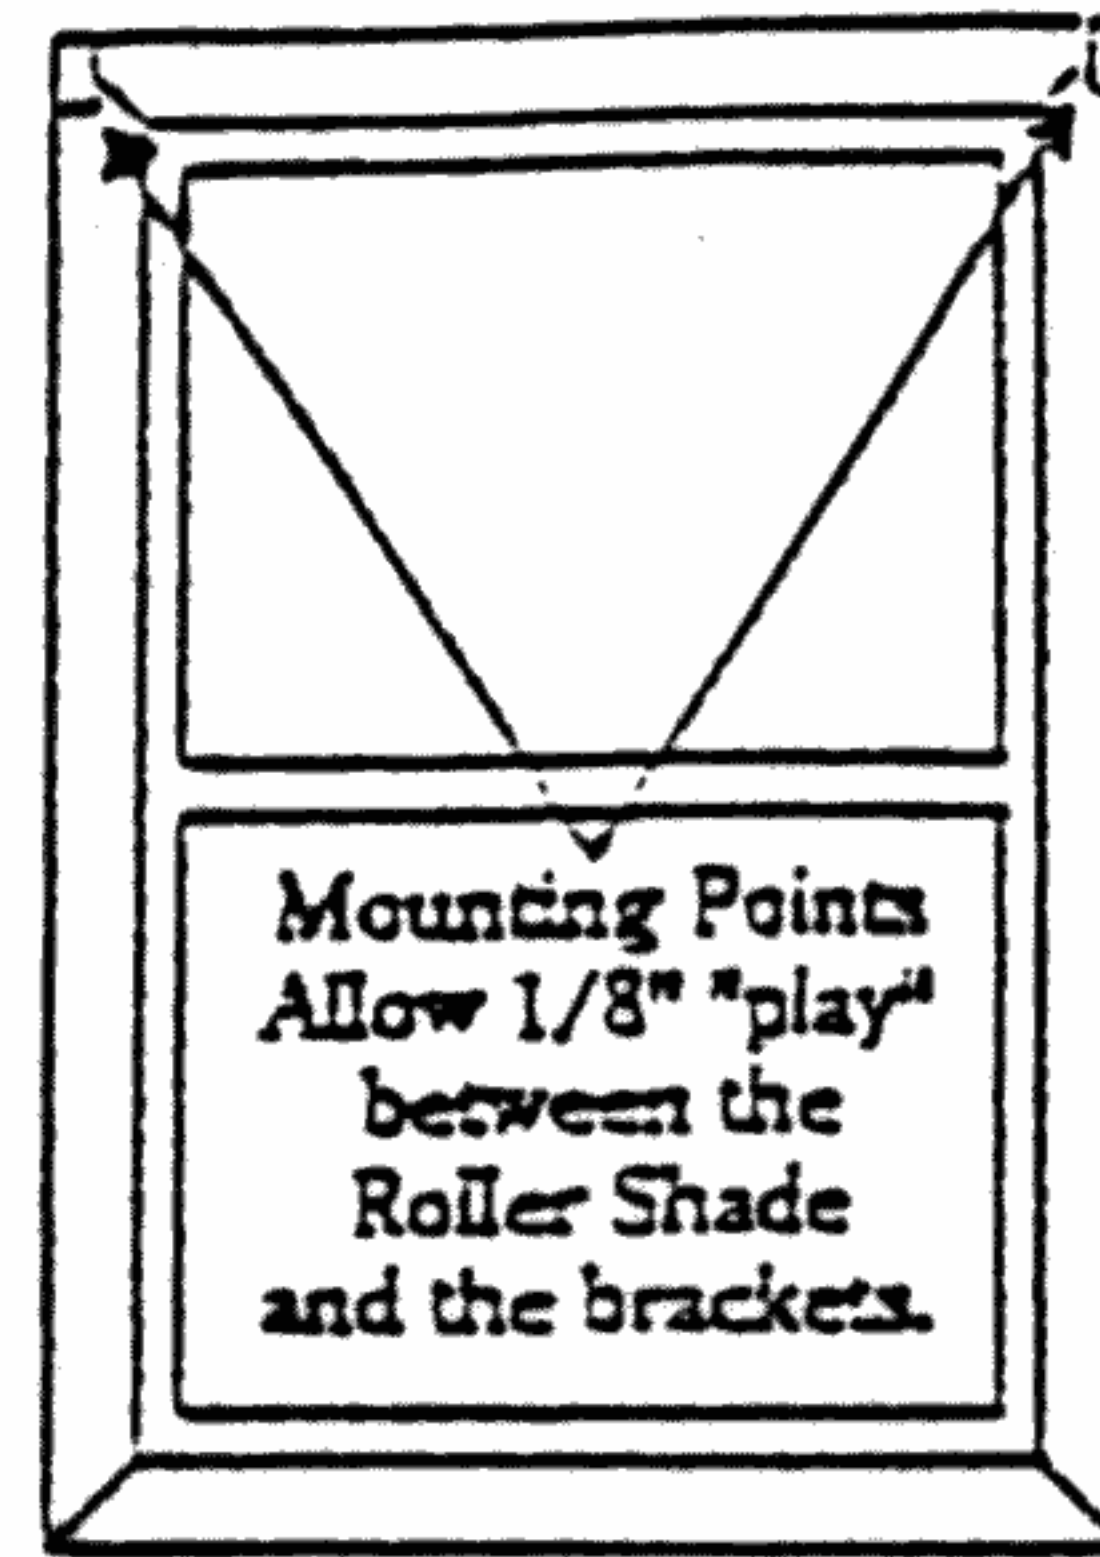

Front View

Type B:


Slotted Bracket

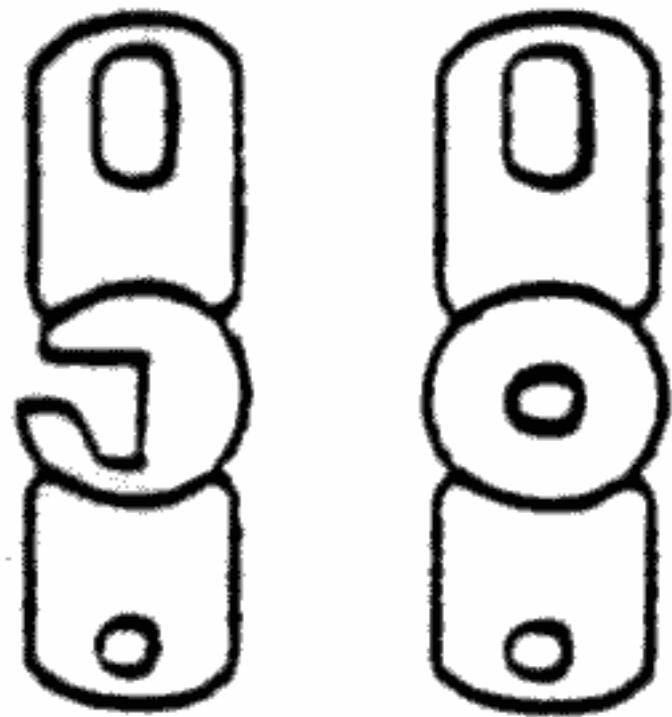


Round Pin Bracket

Inside Mount Brackets  
(Exact measurement)

## Inside Mount

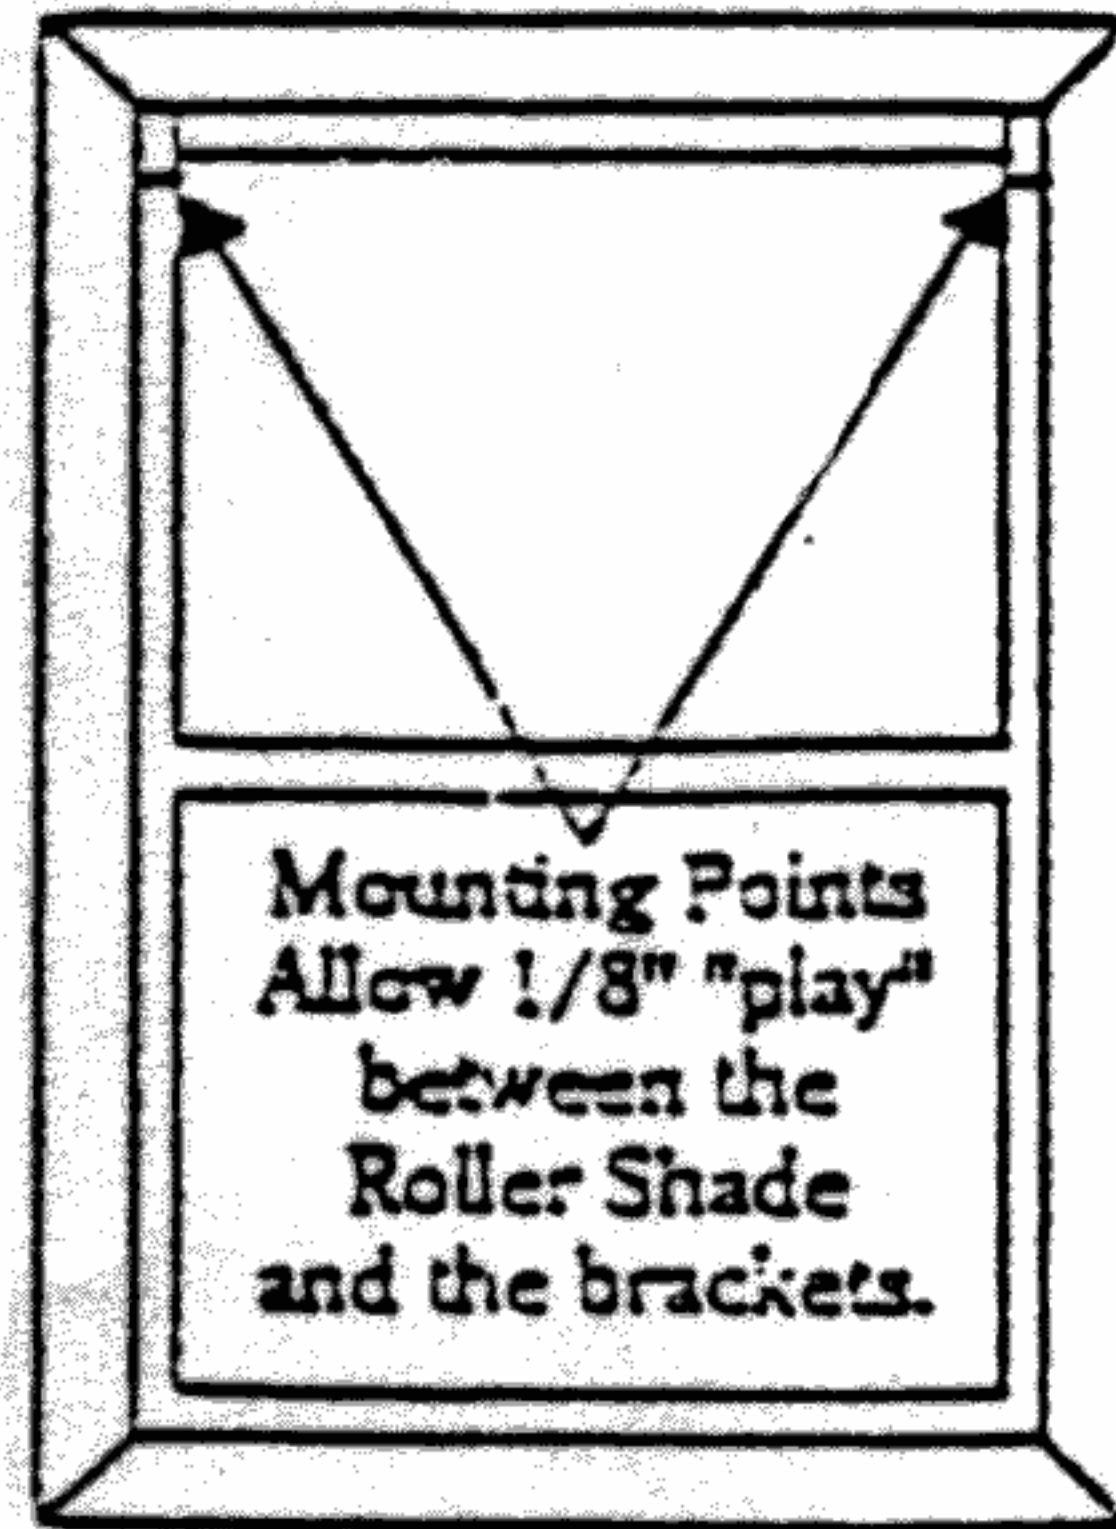

Front View

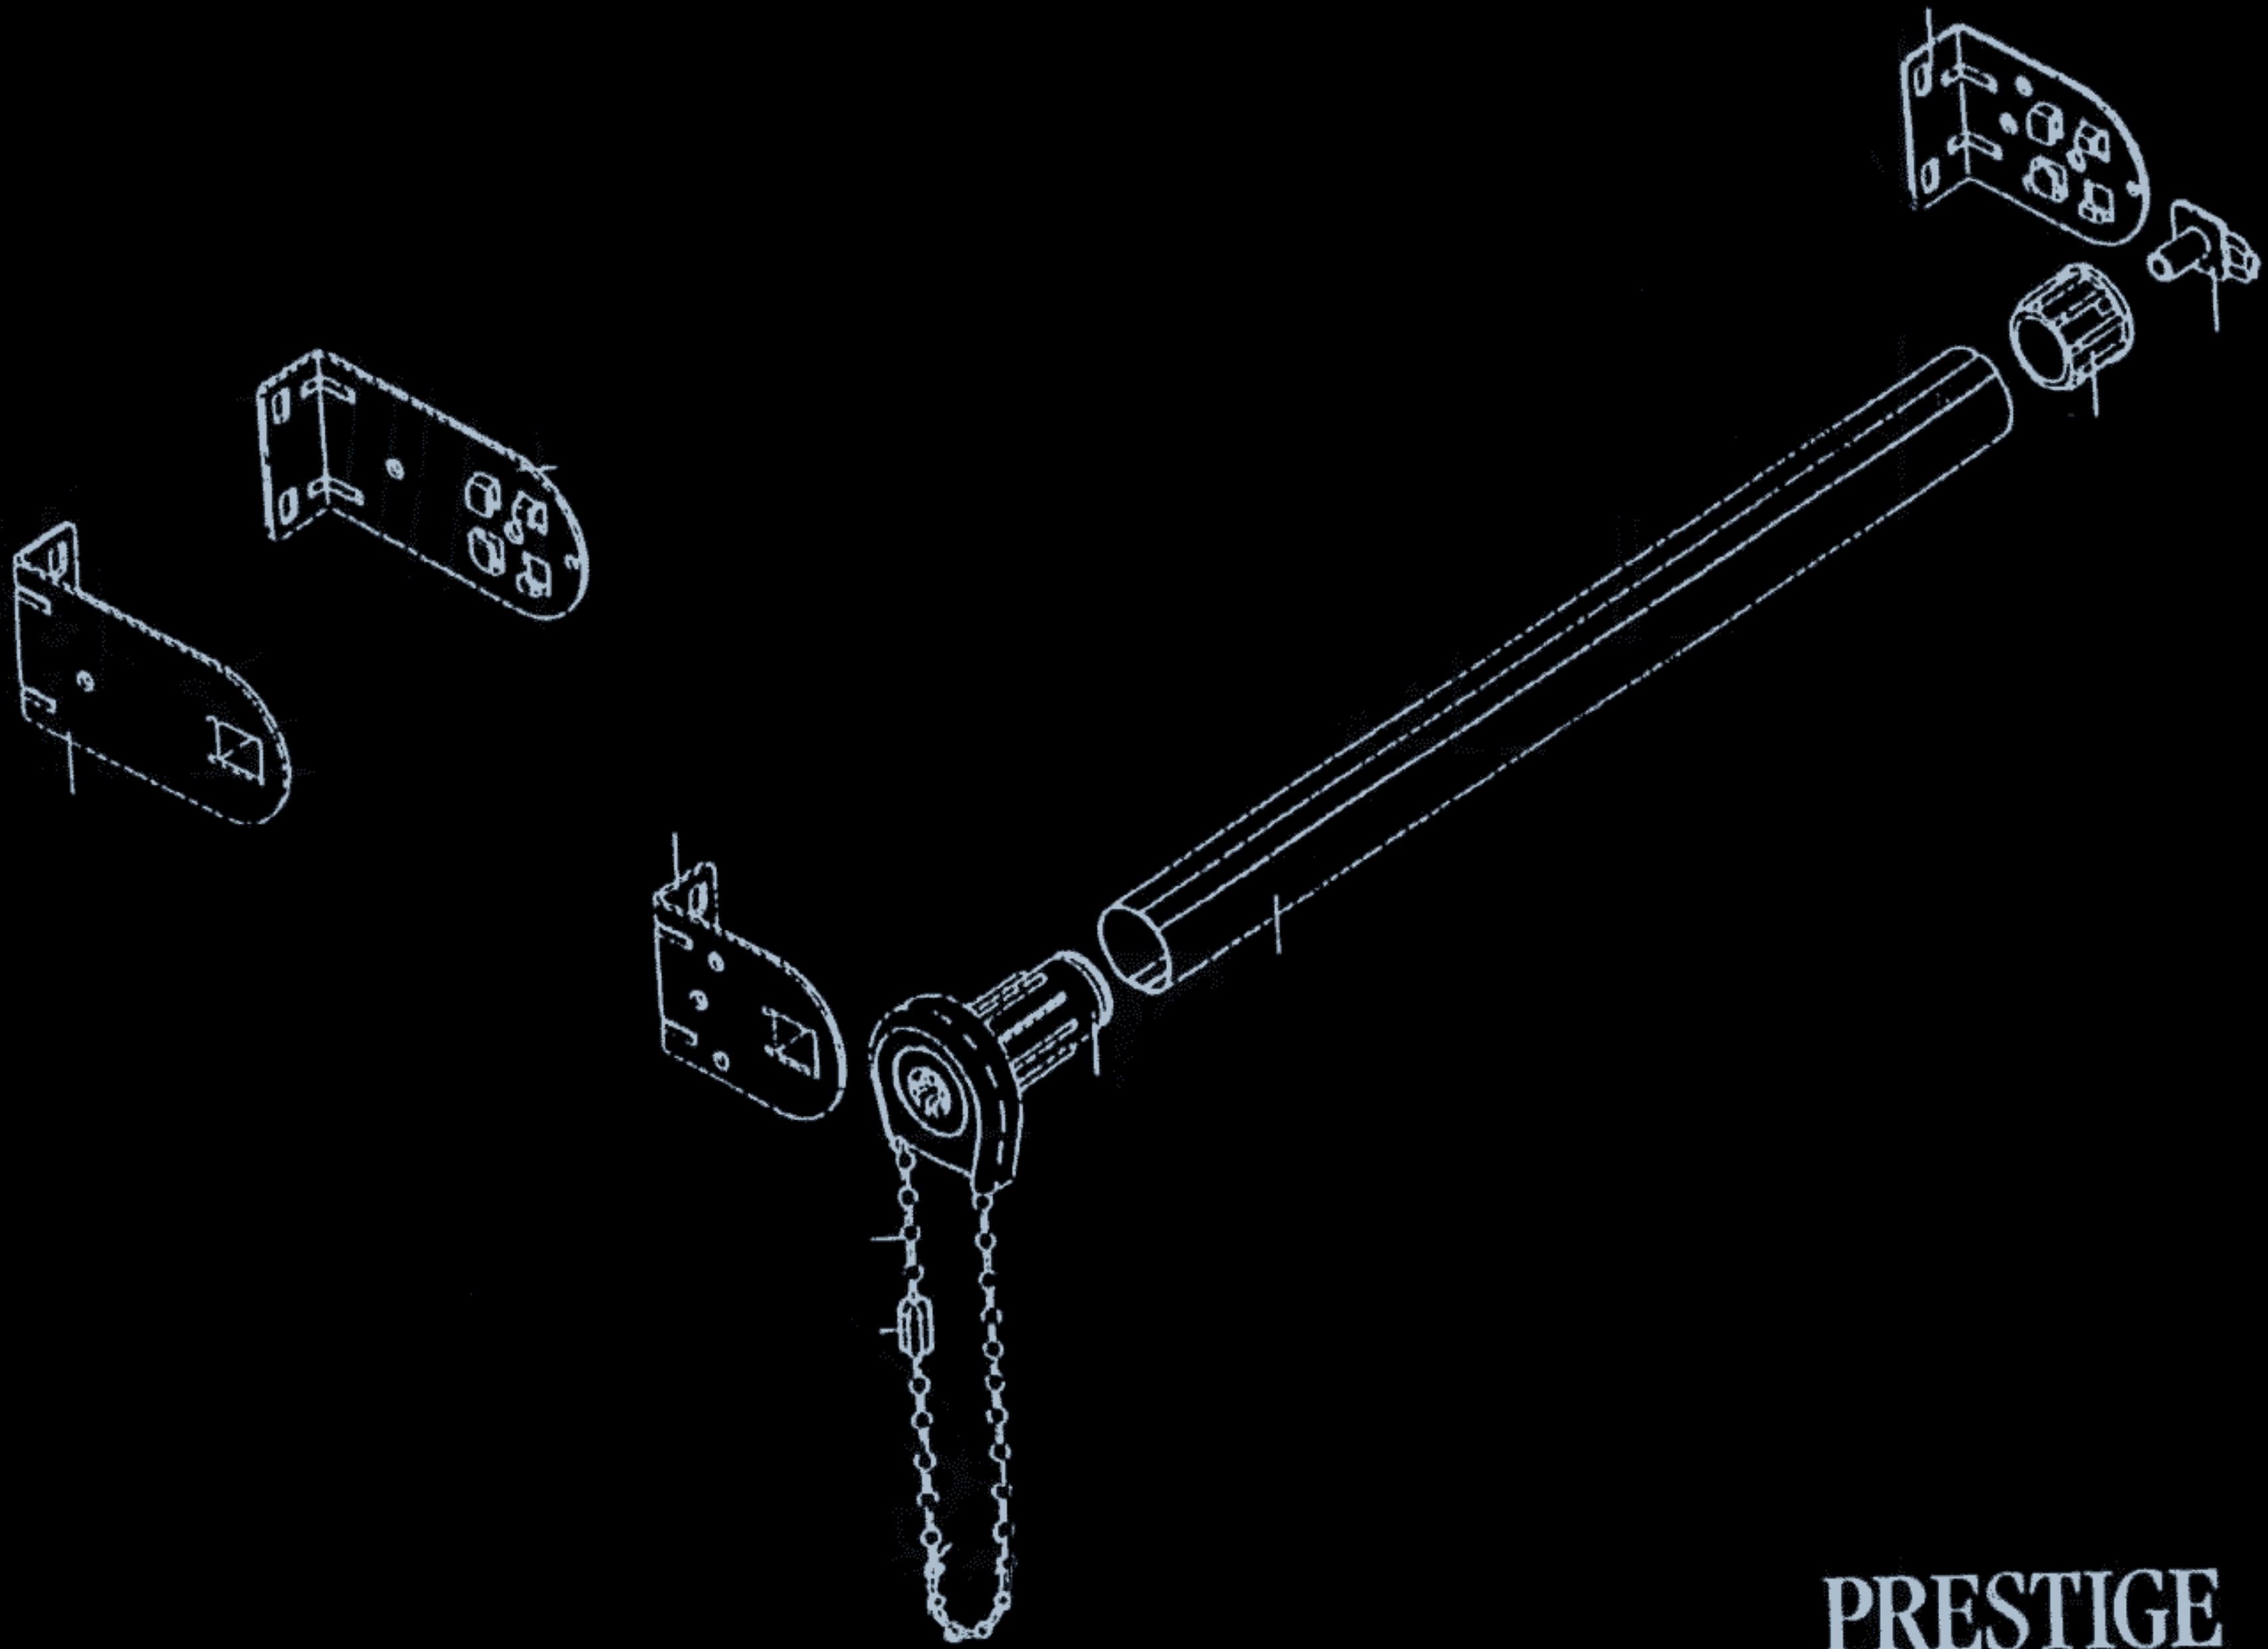

# PRESTIGE

WINDOW FASHIONS

195 Raritan Center Parkway  
PO Box 551  
Edison, NJ 08818-0551

Nat. Water: 800-651-2110 • Nat. Fax: 800-775-9554  
Phone: 732-725-2110 •




# Roller Shade

*Spring Loaded*


## Installation Instructions

Installation is easy. The enclosed brackets can be used for either an inside or outside mounted installation. The brackets should be fastened into wood. If mounting into drywall, be sure to use a molly bolt or wall anchor. It is very important that the brackets do not squeeze the blind. When the blind is raised there should be "play" between the roller and brackets.

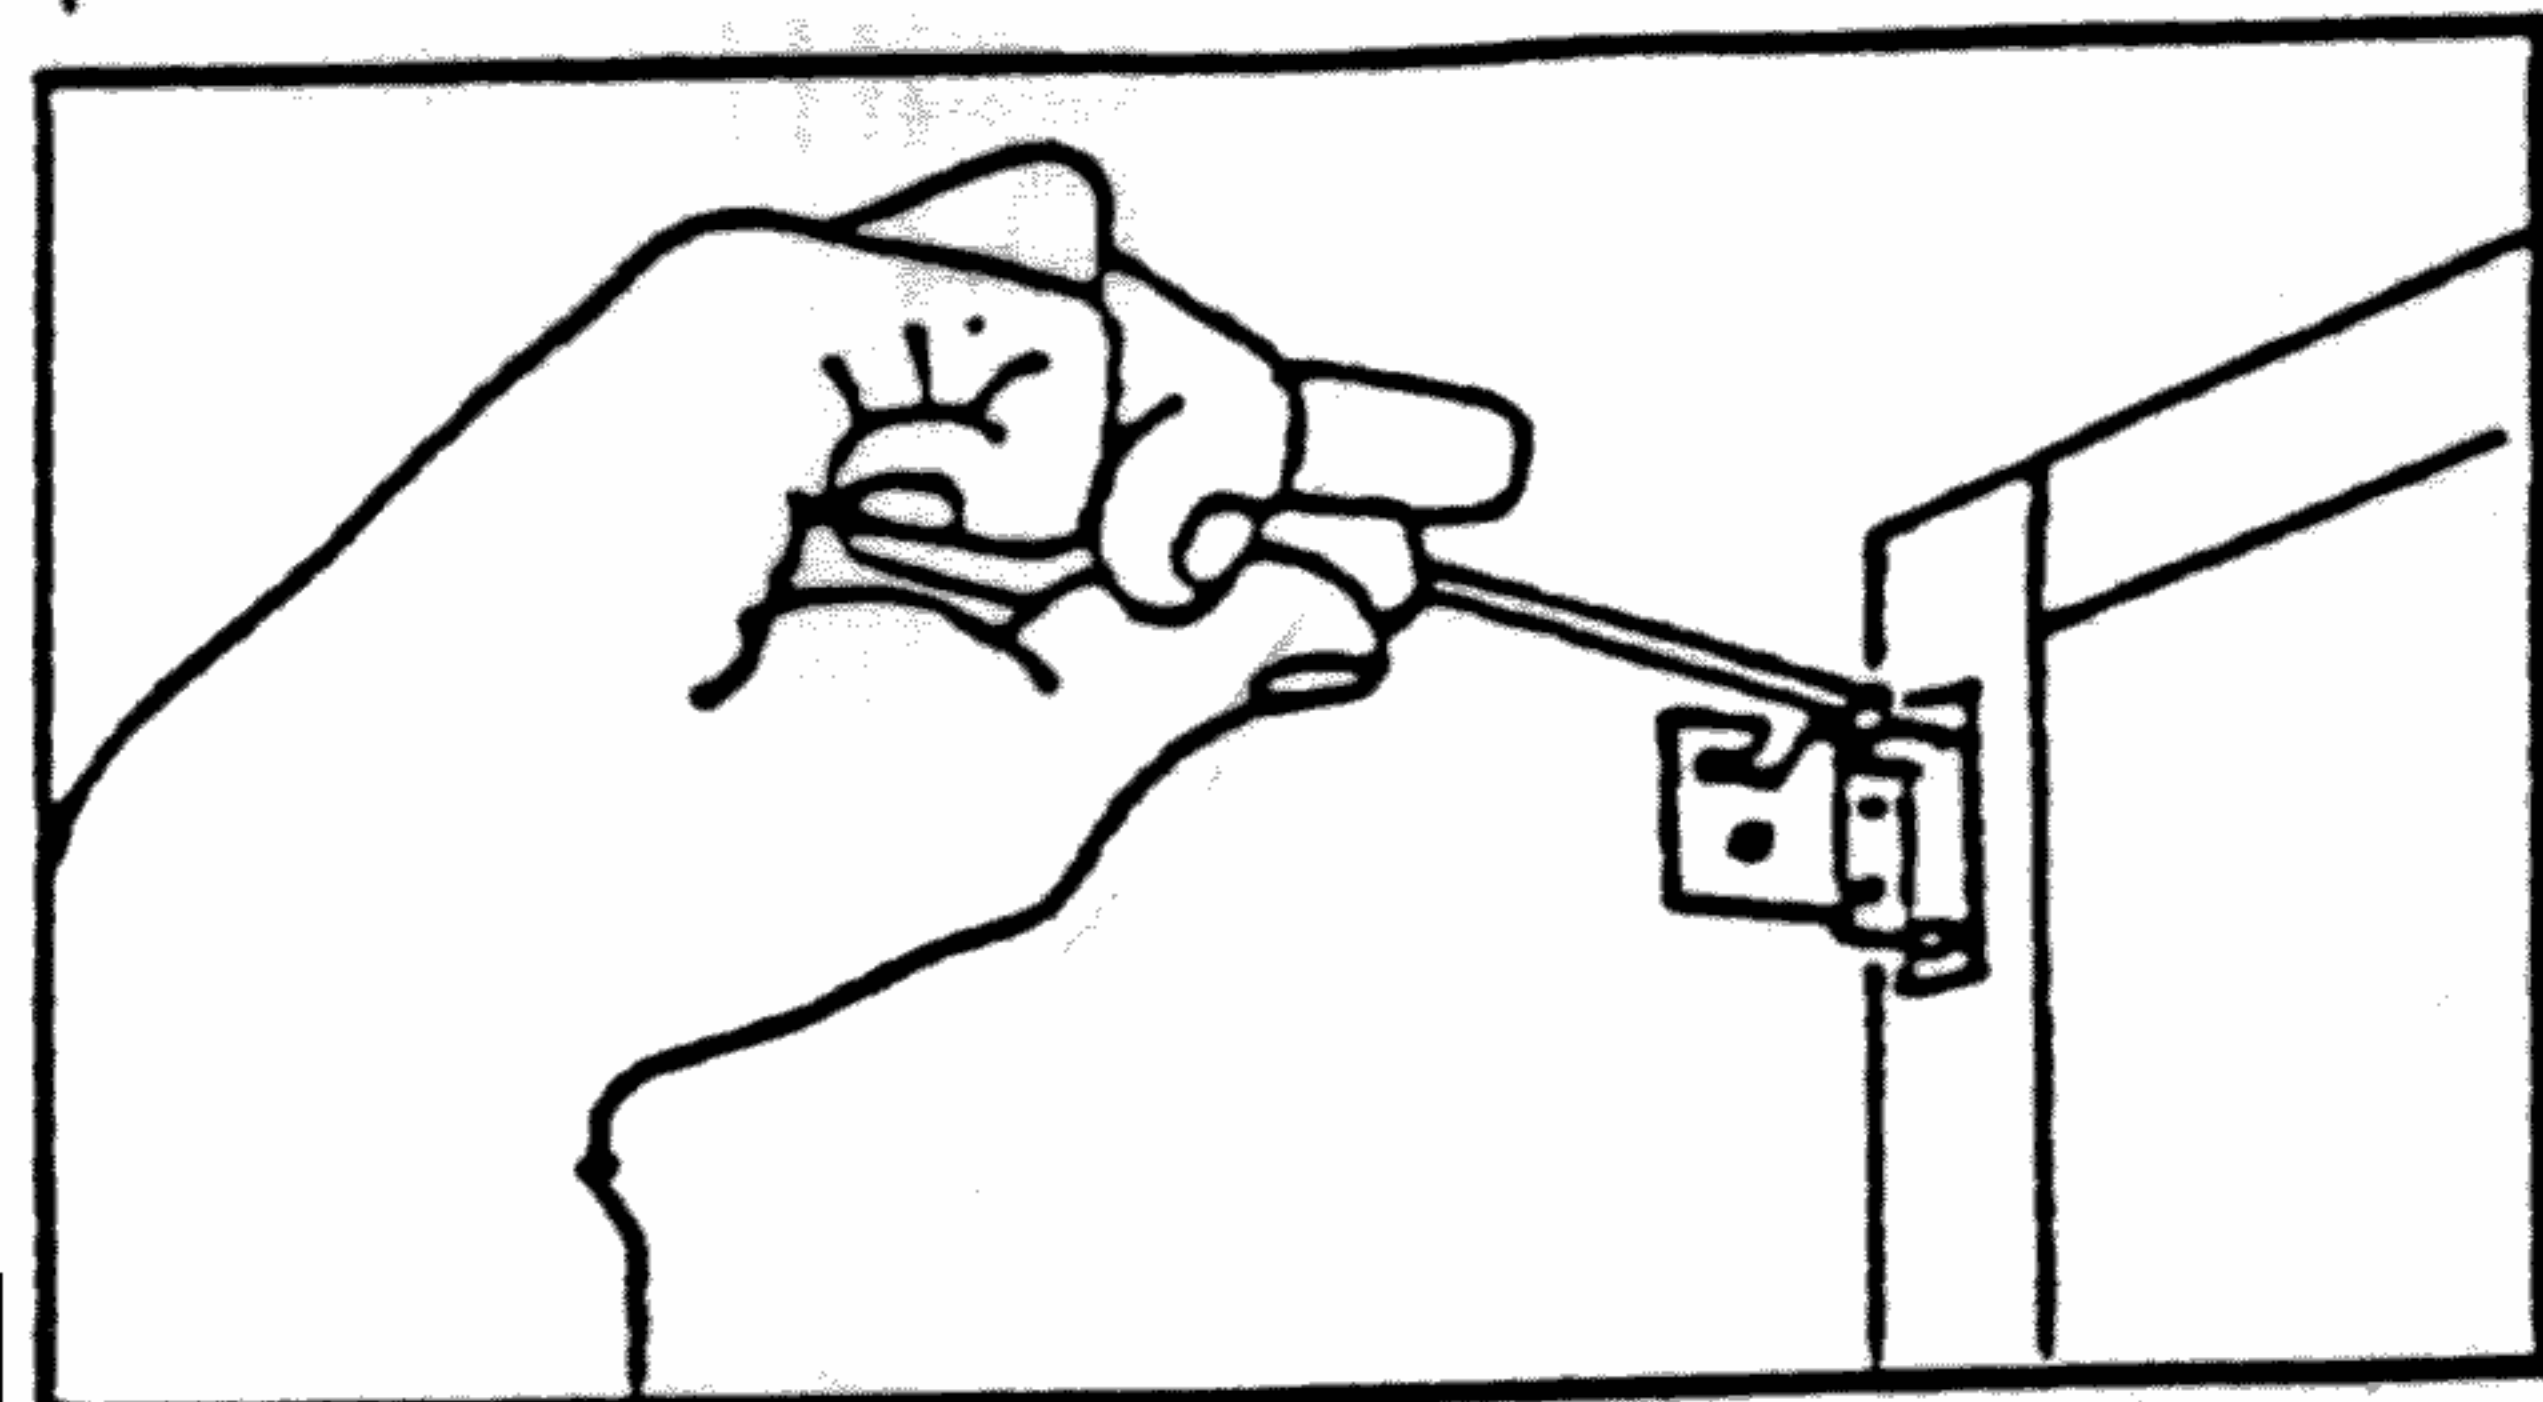


**1**

Mount the left bracket slotted end up. The right bracket is mounted reversed. For reverse roll mount brackets reversed.

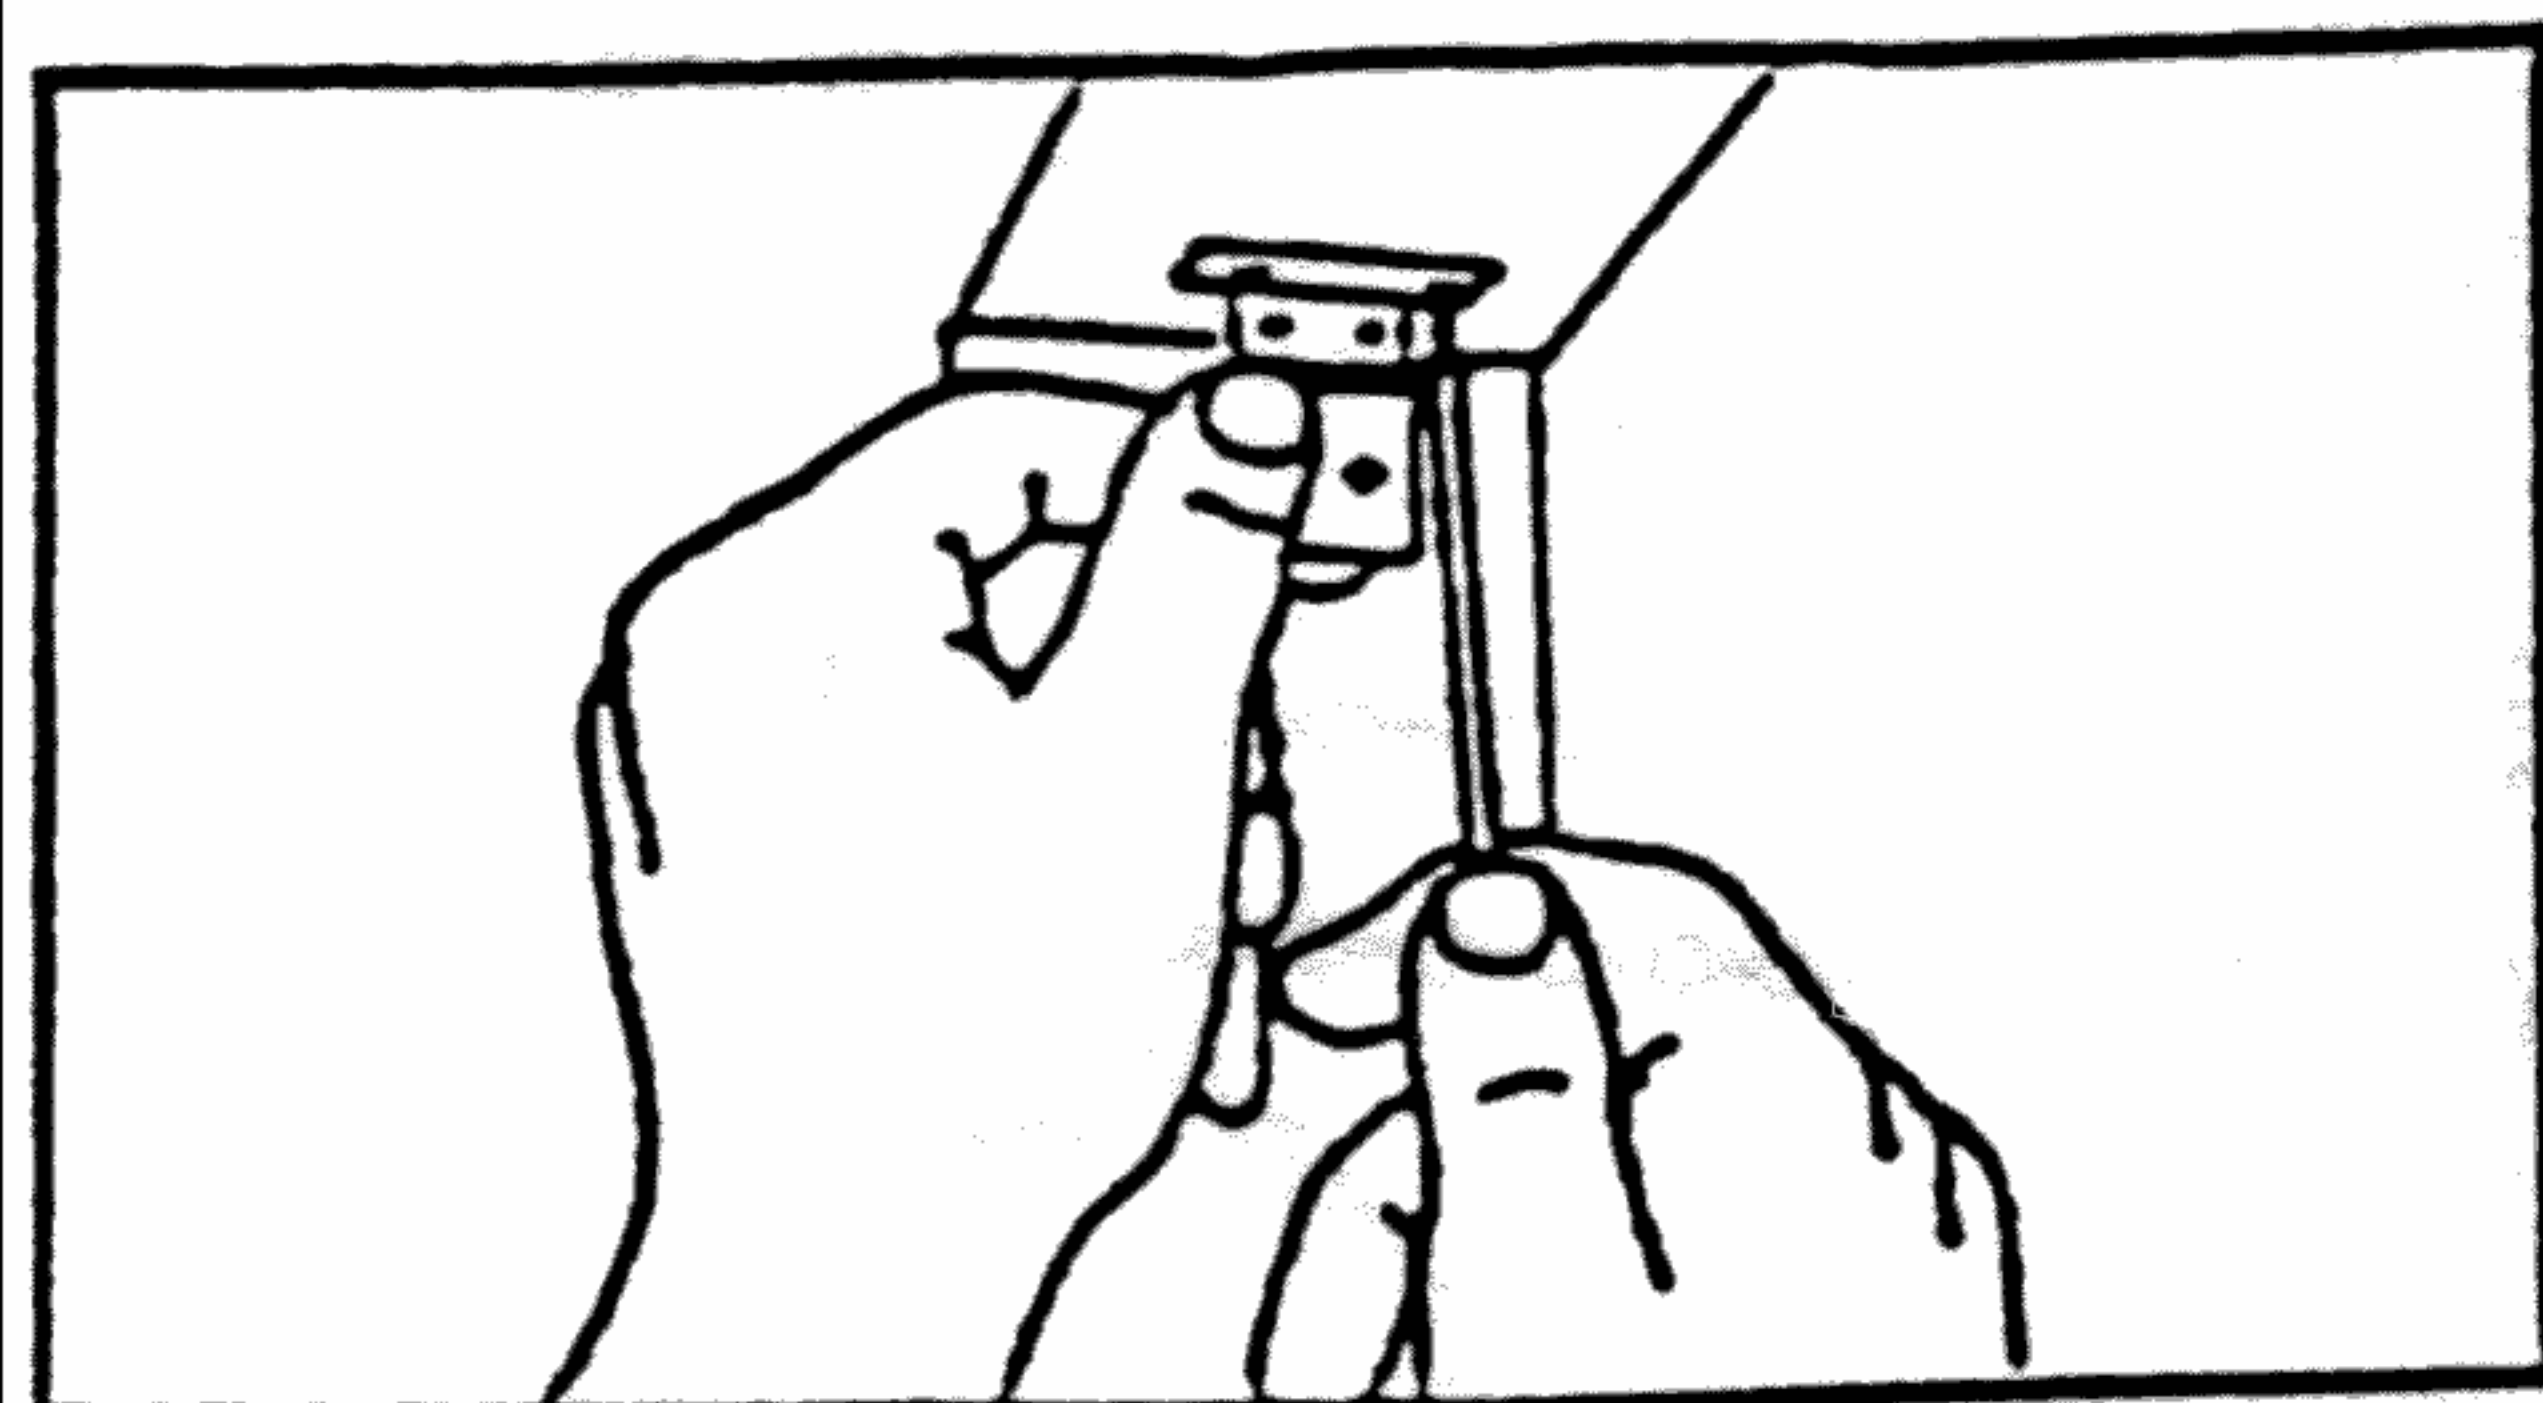


**2**

Mounting in the ceiling or inside the window opening

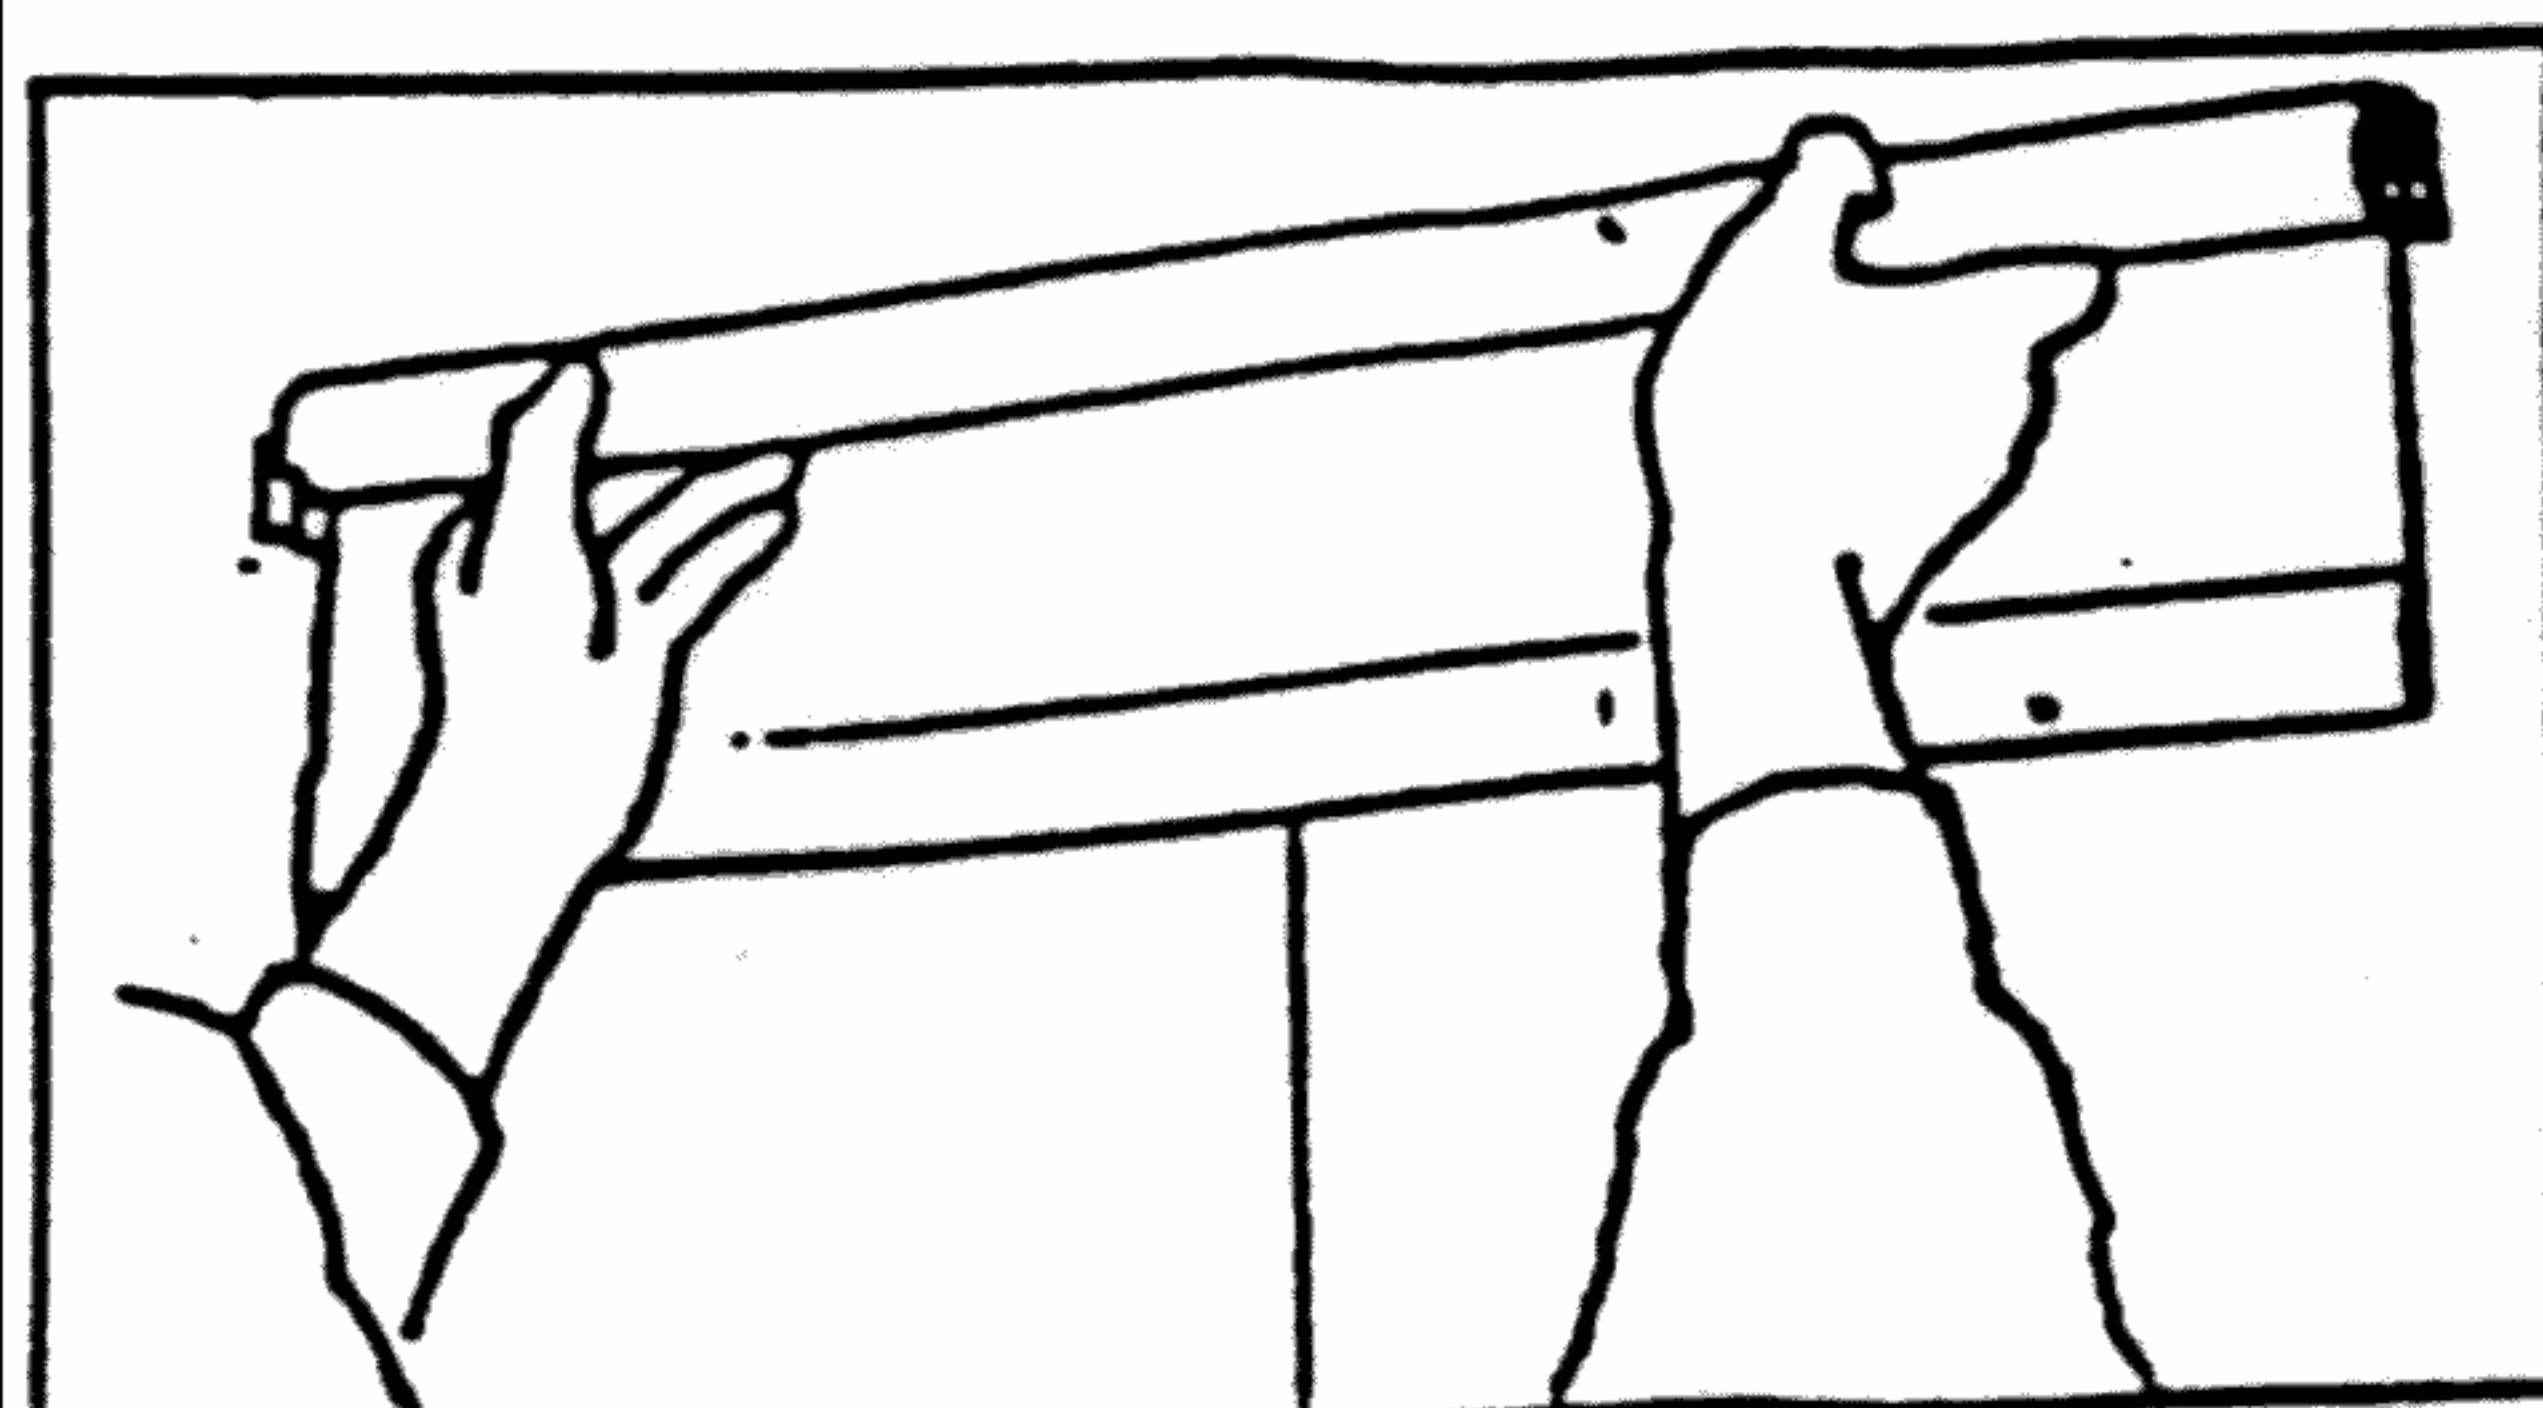


**3**

Put the shade into the brackets. Insert round end pin into right bracket first. Then insert other end into slot of left bracket.

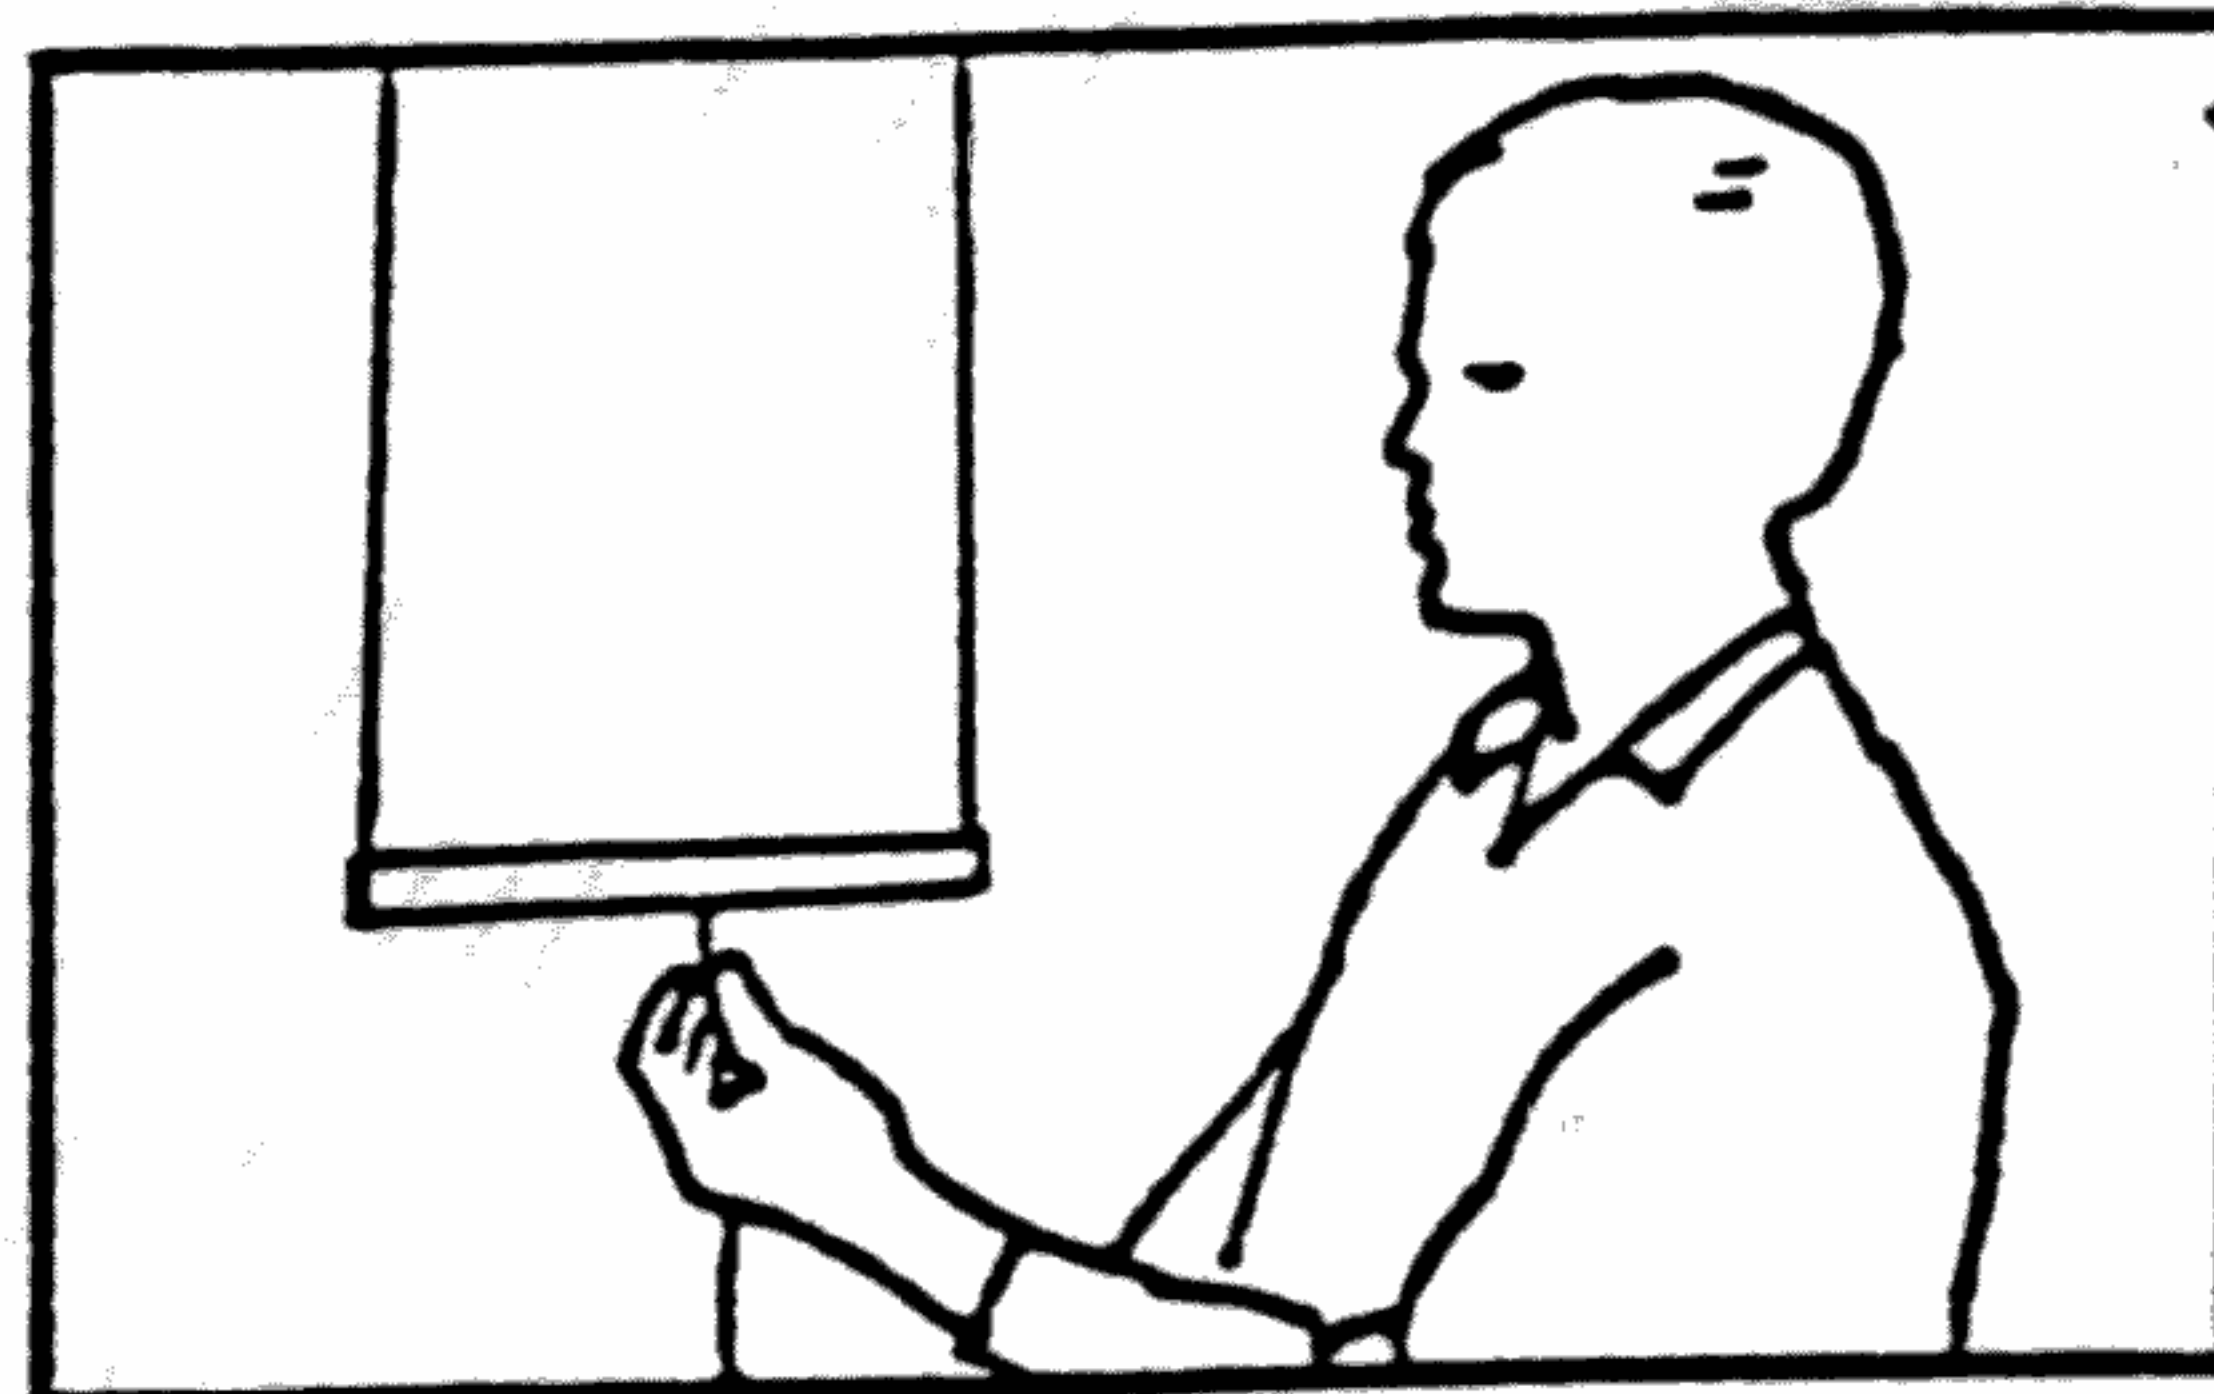


**4**

Lower the shade 16" from the top to tighten the spring.

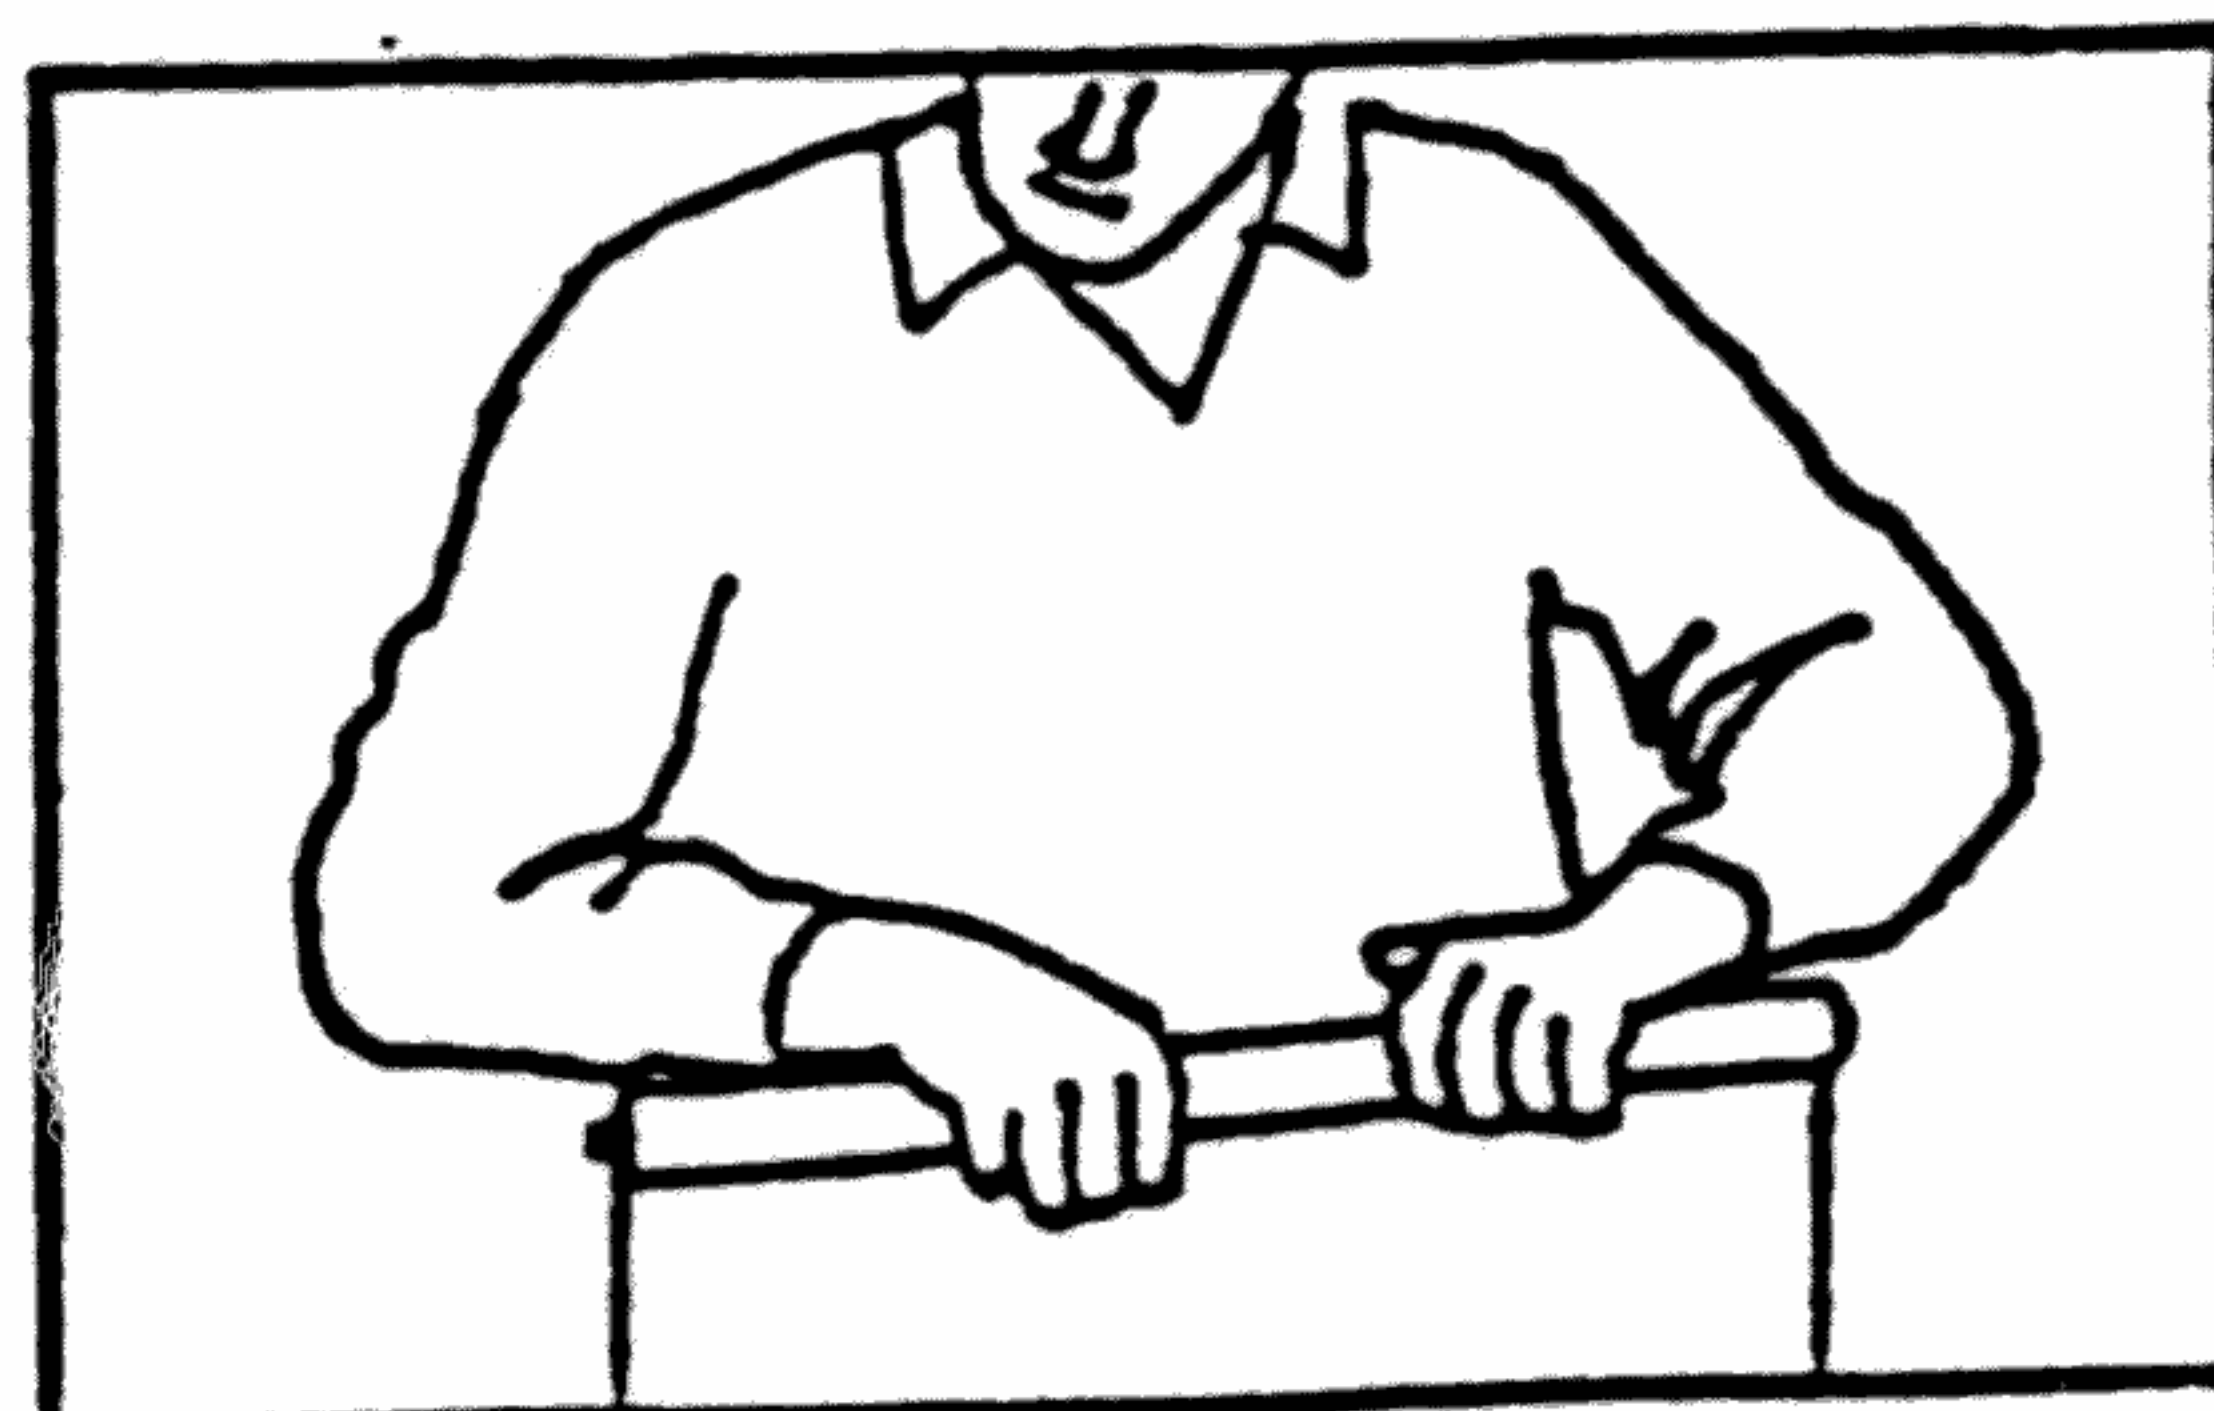

**5**

Lift the shade off the bracket and roll up.

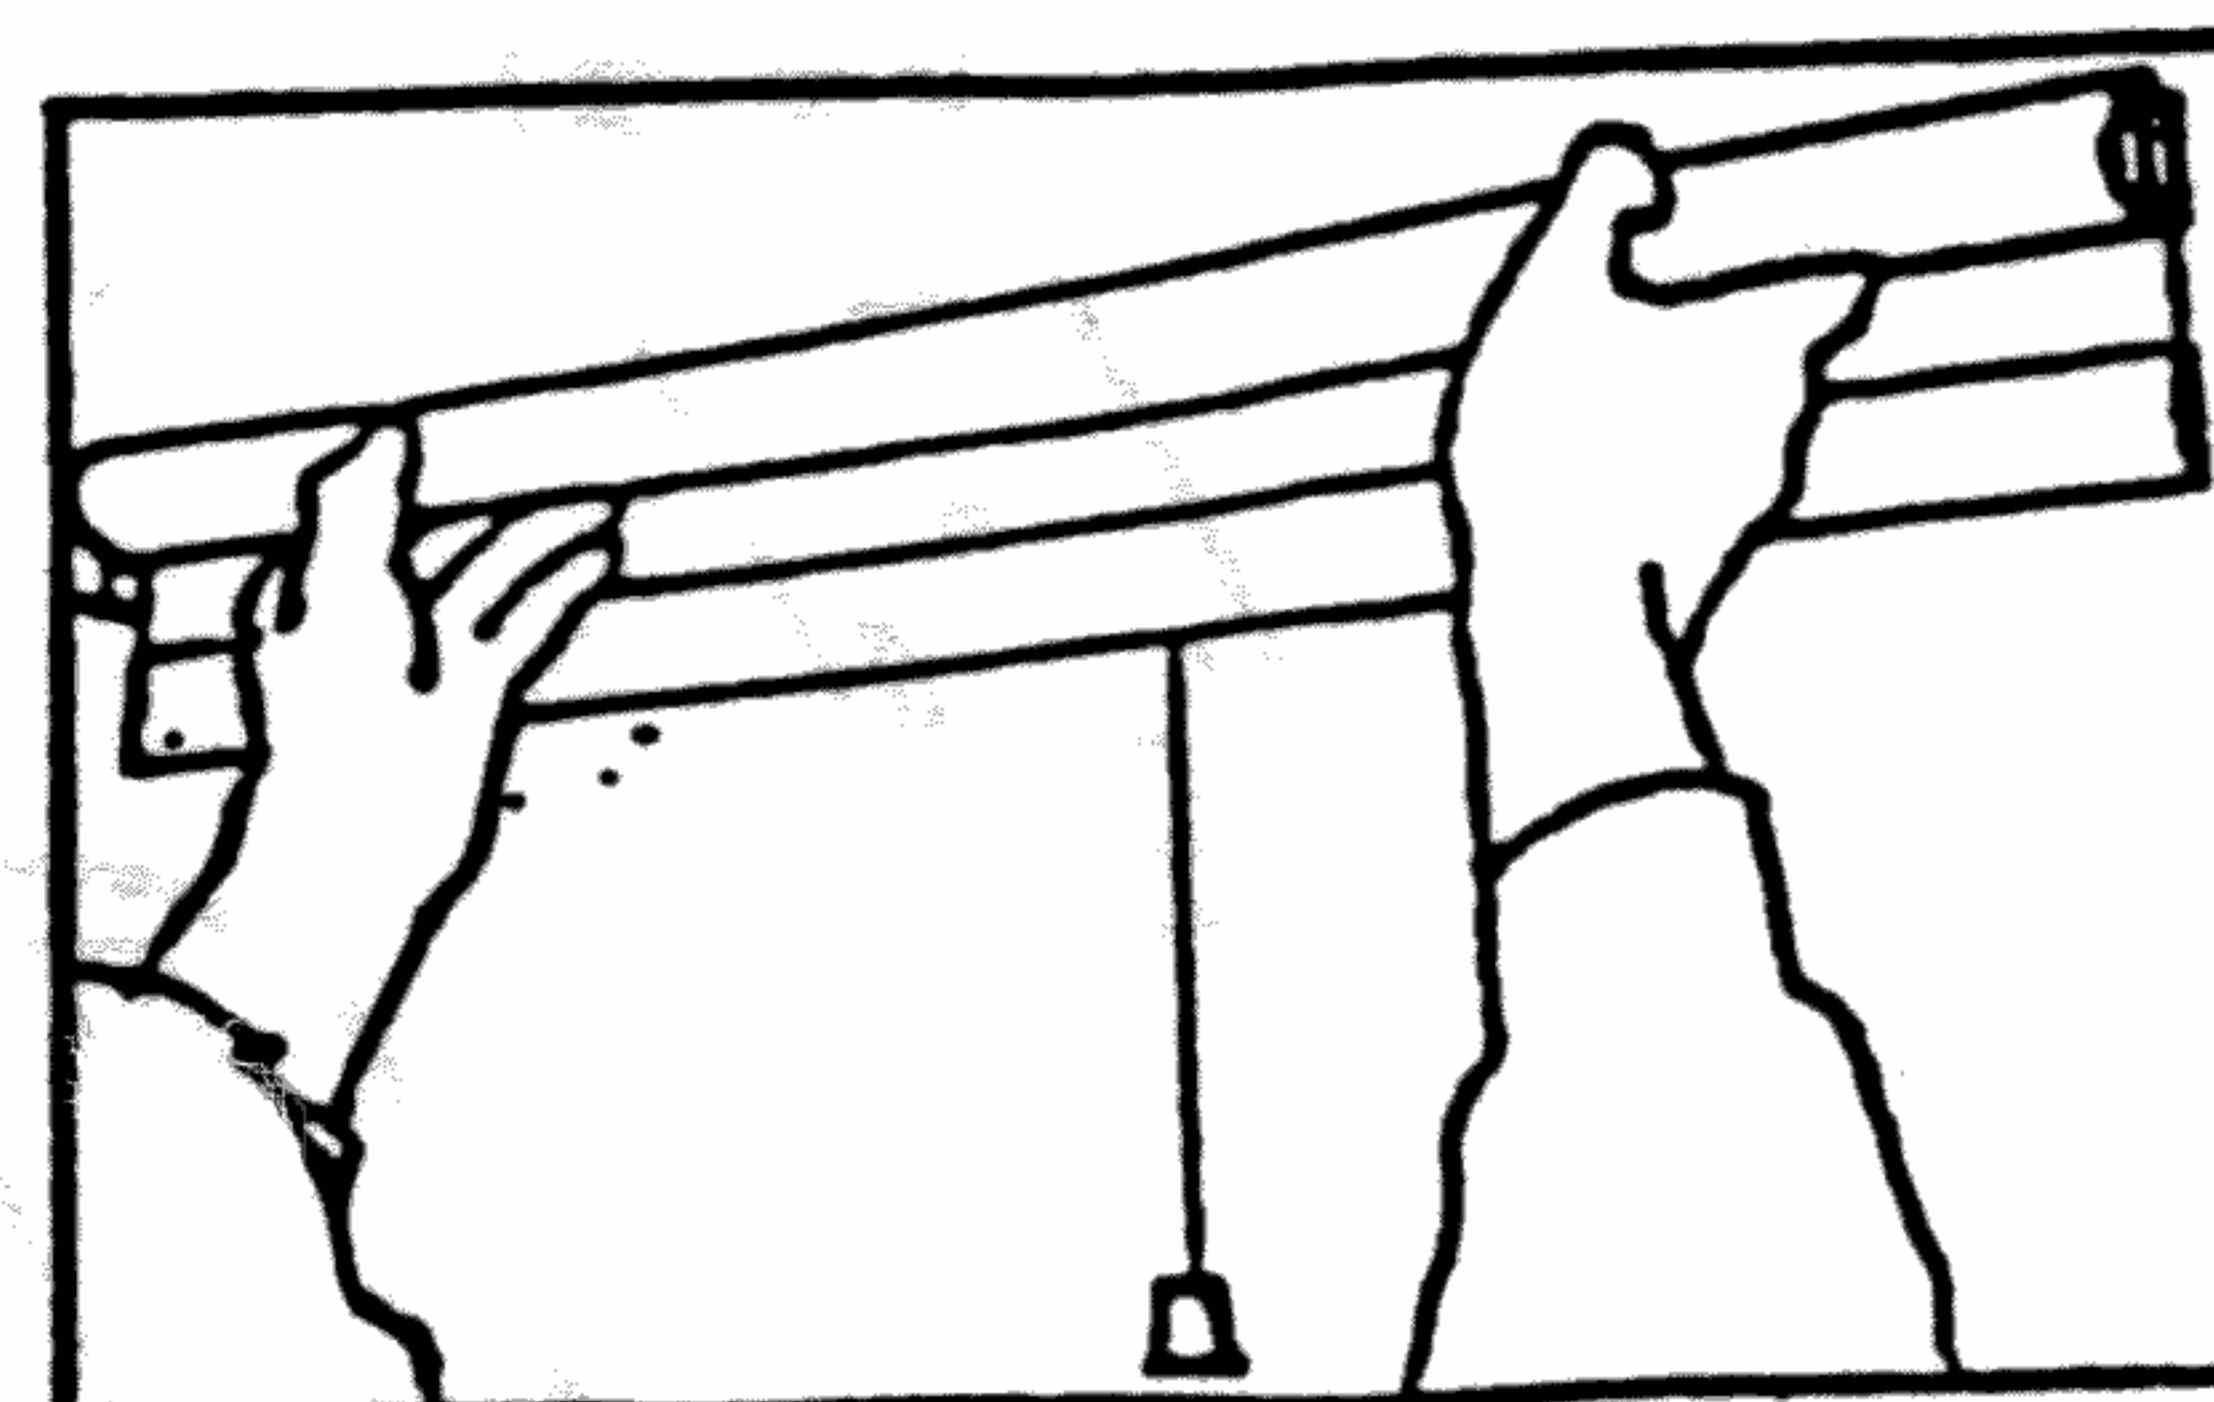

**6**

Place the shade in the brackets and check whether the spring is tight enough. If not, repeat steps 4 and 5.